
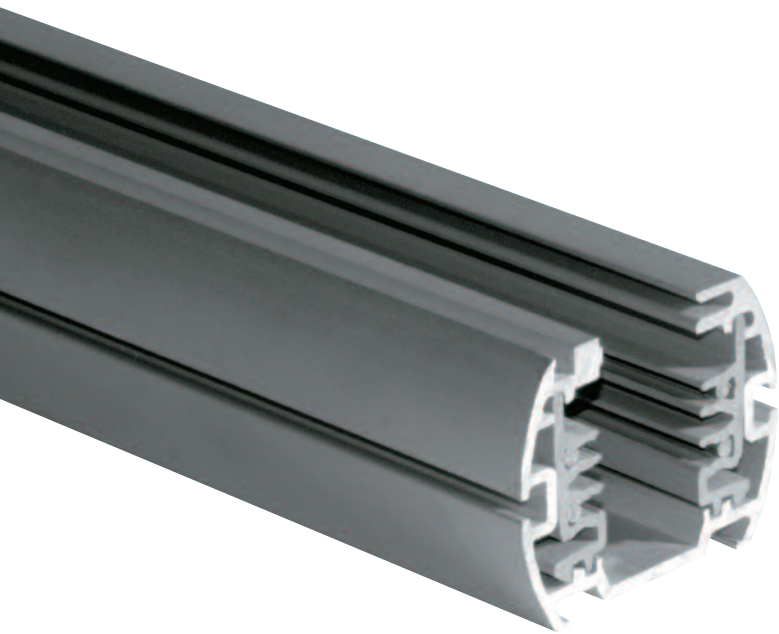


Projecting the installation

While connecting the accessories to the tracks, ensure the continuity of the earthing.

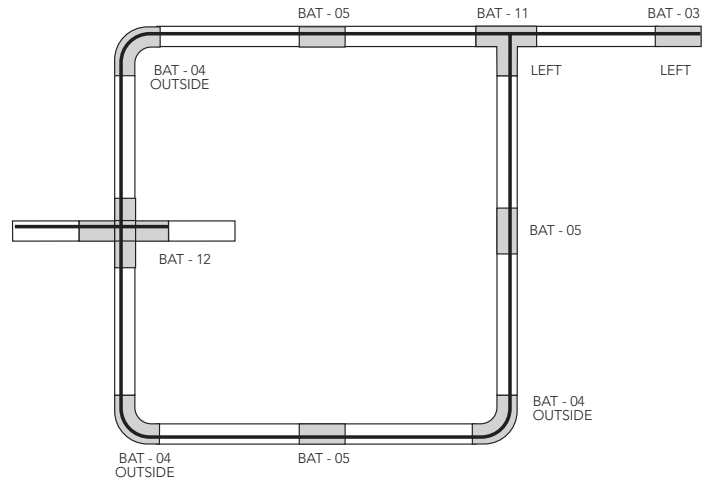

- BAT 01 1 METER
- BAT 20 2 METERS
- BAT 30 3 METERS



- WHITE
- BLACK MATT
- SILVER ANODIZED

## B.A.T. system

### BAT 02

UNIVERSAL ADAPTER  
MAX 5 kg

- WHITE
- BLACK
- SILVER

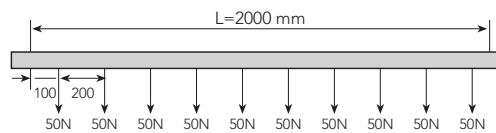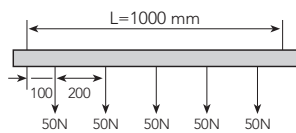

## BAT 05

LINEAR JOINT

□ WHITE ■ BLACK ■ SILVER



## BAT 06


LINEAR JOINT (WITHOUT ELECTRIC CONTACT)

□ WHITE ■ BLACK ■ SILVER



## BAT 16


STRAIGHT  
REINFORCEMENT  
(STEEL)

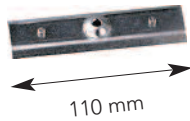

## BAT 10

DEAD-END

□ WHITE ■ BLACK ■ SILVER

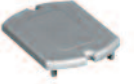

## BAT 13

MECHANICAL  
ADAPTER ↓ 100 N

□ WHITE ■ BLACK ■ SILVER



## BAT 09



WIRE SUSPENSION KIT (2 METERS)  
ONLY BLACK COLOUR



## BAT 03

LIVE END  
DX= LEFT EARTH  
SX = RIGHT EARTH


□ WHITE ■ BLACK ■ SILVER

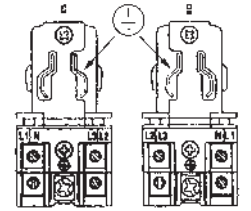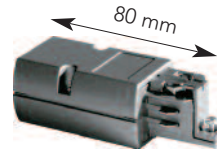

## BAT 04

90° JUNCTION  
DX= LEFT EARTH  
SX = RIGHT EARTH

□ WHITE ■ BLACK ■ SILVER

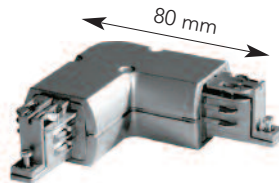

## BAT 08

FLEXIBLE JOINT


□ WHITE  
■ BLACK



## BAT 07

MEAN  
CONNECTOR


□ WHITE ■ BLACK ■ SILVER

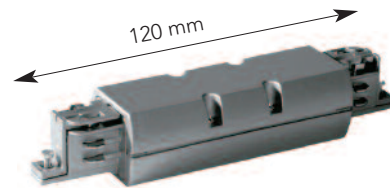

## BAT 11

"T" JUNCTION  
DX= LEFT EARTH  
SX = RIGHT EARTH

□ WHITE ■ BLACK ■ SILVER

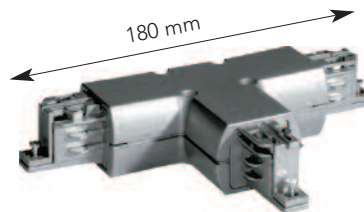

## BAT 12

"X" JUNCTION  
(CROSS)

□ WHITE ■ BLACK ■ SILVER

